


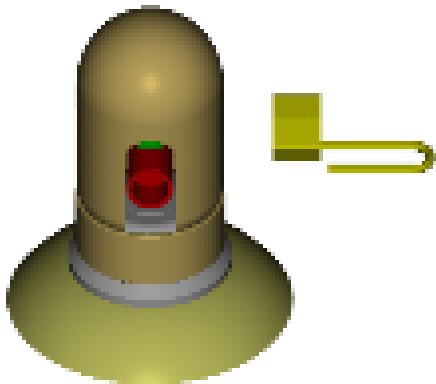

SNAP CAP INSTALLATION PROCEDURE

STEP 1

BE SURE THAT THE VALVE ON THE GAS CYLINDER IS CLOSED PRIOR TO INSTALLATION.
REMOVE LOCK. SCREW CAP TO DOWN POSITION.
UNSCREW CAP NO MORE THAN ONE TURN TO ALIGN VALVE PORT & CAP SLOT




STEP 2

ALIGN CAP SLOT AND VALVE PORT.
ONCE CAP SLOT AND VALVE PORT ARE ALIGNED,
TIGHTEN SET SCREW AGAINST NECK RING.

STEP 3

ATTACH GAGES

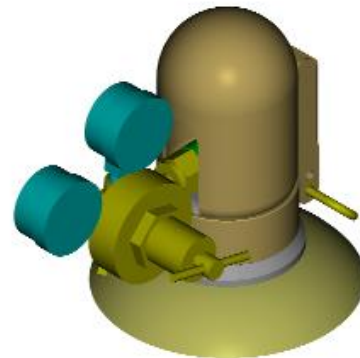

STEP 4

ALWAYS MAKE SURE THE VALVE IS SHUT OFF
PRIOR TO CLOSING AND LOCKING CAP.
CLOSE AND LOCK CAP.

IMPORTANT:

ALWAYS CLOSE GAS VALVE PRIOR TO LOCKING CAP.

ALWAYS HAVE CAP CLOSED AND LOCKED WHILE IN TRANSPORT.

CHECK WITH LOCAL AND STATE LAWS REGARDING TRANSPORTATION OF A CYLINDER WITH THE REGULATORS ATTACHED.